




**Variable Bore Rams, Inc.**  
**1086 Aillet Rd**  
**Broussard, LA 70518**  
**Phone: +1.337.256.5334**  
**Fax: +1.337.256.8724**

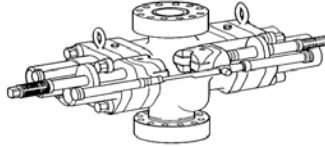

Cameron Flex Bore Rams

<b>Bore Size (inches)</b>	7-1/16"	7-1/16"	7-1/16"	11"	11"	11"	13-5/8"	13-5/8"	13-5/8"	16-3/4"	16-3/4"	18-3/4"	18-3/4"	18-3/4"
<b>Working Pressure (psi)</b>	5M	10M	15M	5M	10M	15M	5M	10M	15M	5M	10M	5M	10M	15M
<b>Type</b>	"T"	"T"	"T"	"T"	"T"	"T"	"T"	"T"	"T"	"T"	"T"	"T"	"T"	"T"
<b>Flex Ranges</b>	*	*	*	*	*	*	*	*	*	*	*	*	*	5" To 6-5/8"

<b>Bore Size (inches)</b>	7-1/16"	7-1/16"	7-1/16"	11"	11"	11"	13-5/8"	13-5/8"	13-5/8"	16-3/4"	16-3/4"	18-3/4"	18-3/4"	18-3/4"
<b>Working Pressure (psi)</b>	5M	10M	15M	5M	10M	15M	5M	10M	15M	5M	10M	5M	10M	15M
<b>Type</b>	"TL"	"TL"	"TL"	"TL"	"TL"	"TL"	"TL"	"TL"	"TL"	"TL"	"TL"	"TL"	"TL"	"TL"

<b>Bore Size (inches)</b>	7-1/16"	7-1/16"	7-1/16"	11"	11"	11"	13-5/8"	13-5/8"	13-5/8"	16-3/4"	16-3/4"	18-3/4"	21-1/4"	21-1/4"	21-1/4"
<b>Working Pressure (psi)</b>	5M	10M	15M	5M	10M	15M	5M	10M	15M	5M	10M	5M	2M	5M	10M
<b>Type</b>	"U"	"U"	"U"	"U"	"U"	"U"	"U"	"U"	"U"	"U"	"U"	"U"	"U"	"U"	"U"
<b>Flex Ranges</b>	2-3/8" To 2-7/8"	2-3/8" To 2-7/8"	2-3/8" To 2-7/8"	2-7/8" To 3-1/2"	2-7/8" To 3-1/2"	*	2-3/8" To 3-1/2"	2-3/8" To 3-1/2"	*	*	*	2-7/8" To 5"	5" To 7"	*	*
<b>Flex Ranges</b>	2-7/8" To 3-1/2"	2-7/8" To 3-1/2"	2-7/8" To 3-1/2"	3-1/2" To 5"	3-1/2" To 5"	*	3-1/2" To 5"	3-1/2" To 5"	*	*	*	*	*	*	*
<b>Flex Ranges</b>	*	*	*	*	*	*	5" To 6-5/8"	5" To 6-5/8"	*	*	*	*	*	*	*